




## **ASFX FILM ROLLER ASSEMBLY**

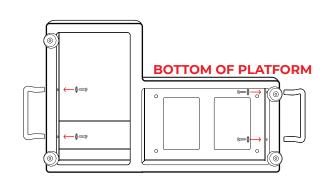


1. **INSTALL THE HANDLES ON BOTH SIDES** OF THE PLATFORM USING THE APPROPRIATE ALLEN WRENCH AND SCREWS WITH WASHERS.

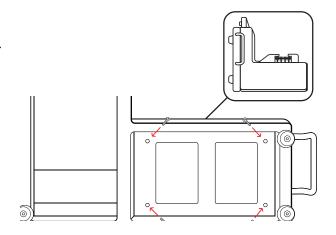


2. PLACE THE PLATFORM AND MACHINE ON ITS SIDE LINING UP THE HOLES ON THE MACHINE TO THE SCREW HOLES ON THE PLATFORM. (REFER TO THE IMAGE ABOVE FOR REFERENCE). SECURE THE MACHINE TO THE PLATFORM USING THE SCREWS THAT DO NOT HAVE WASHERS.

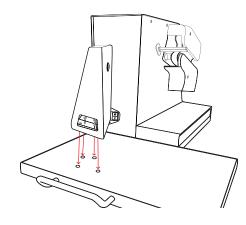


3. PLACE PLATFORM UPRIGHT. LINE UP FILM HOLDER WITH THE 4 SCREW HOLES AND SCREW IN WITH INCLUDED WASHERS.

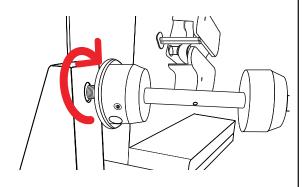

4. SCREW FILM ROLLER INTO FILM HOLDER AND HAND TIGHTEN.

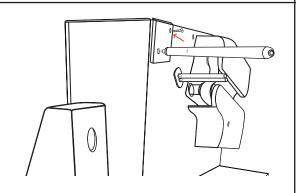

5. TAKE THE FILM ALIGNMENT BRACKET AND ALIGN THE HOLE ON THE BRACKET TO THE HOLE INDICATED IN THE EXAMPLE ABOVE. SECURE THE BRACKET WITH THE BLACK SCREW THAT IS PROVIDED IN THE SPARE PARTS BOX.

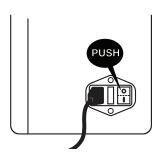

6. PLUG IN THE POWER CABLE AND TURN THE MACHINE ON USING THE POWER SWITCH LOCATED ON THE BACK.